


## cleaning the production well and heat pump

**step 1 + 2:** see instructions for cleaning the production well

**step 3:** cleaning process well with heat pump

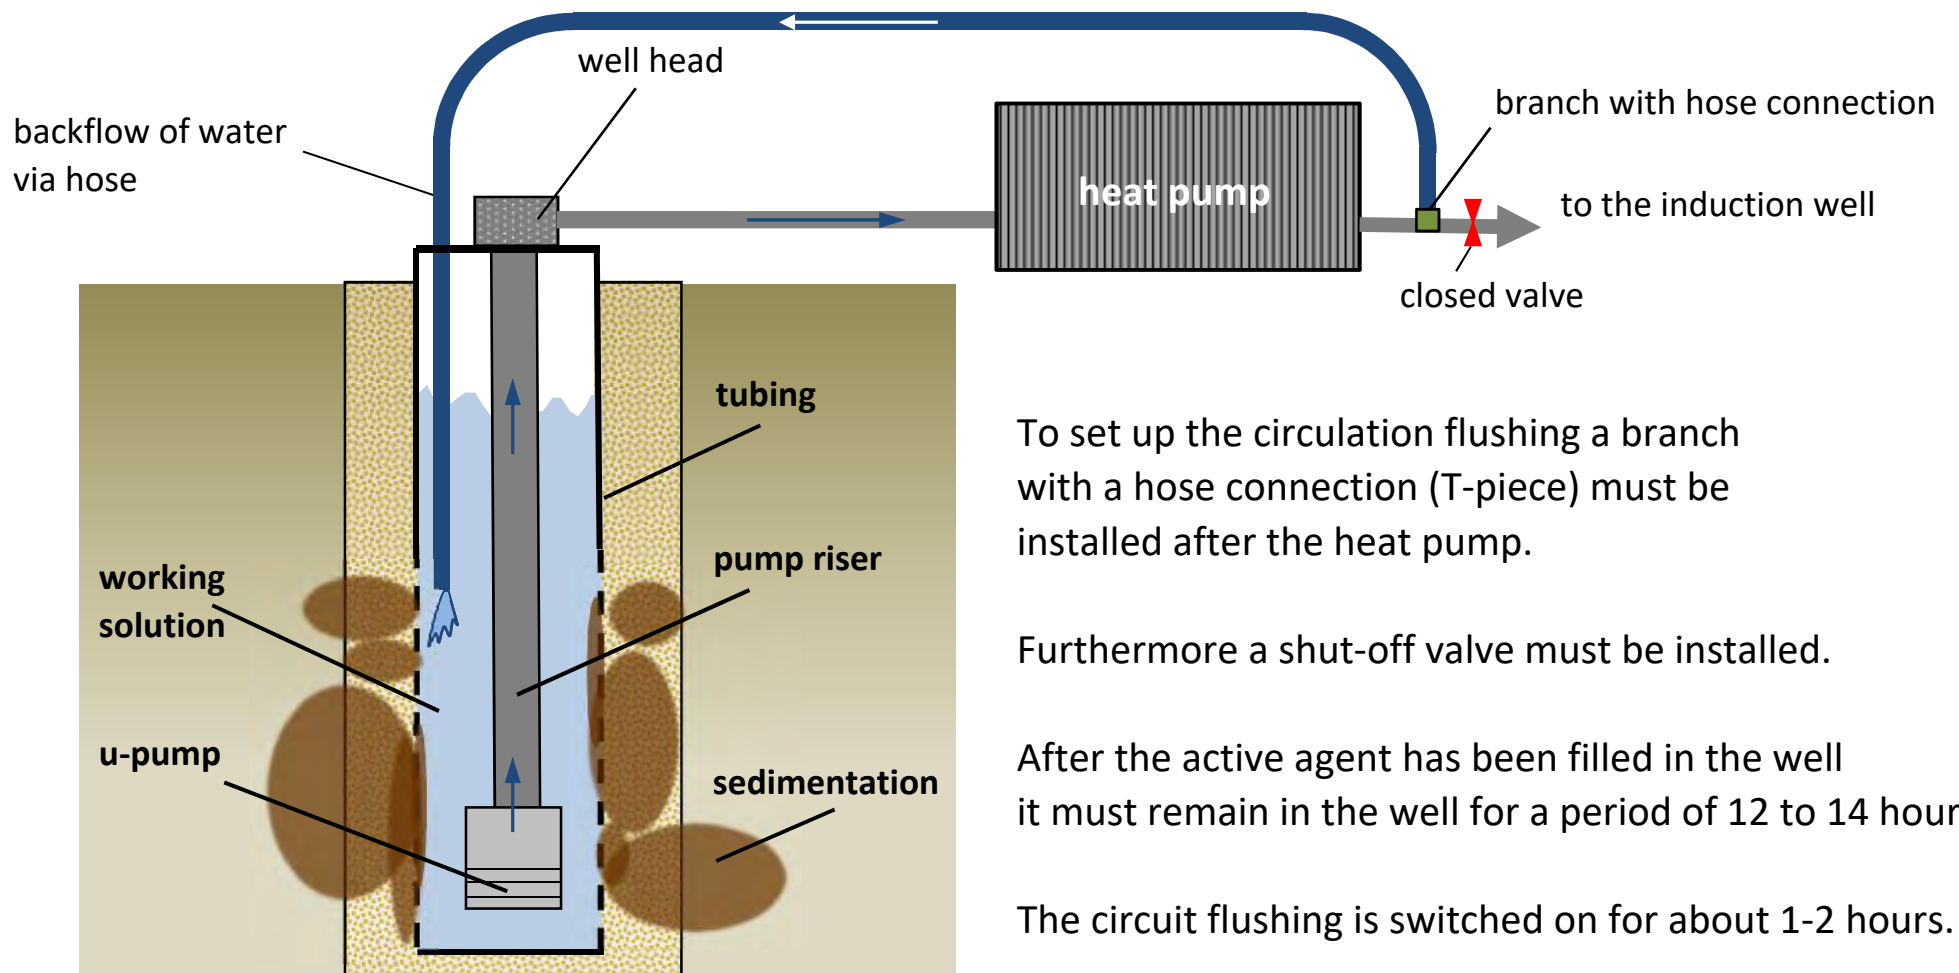


To set up the circulation flushing a branch with a hose connection (T-piece) must be installed after the heat pump.

Furthermore a shut-off valve must be installed.

After the active agent has been filled in the well it must remain in the well for a period of 12 to 14 hours.

The circuit flushing is switched on for about 1-2 hours.

**step 4:** pump out the solution after cleaning

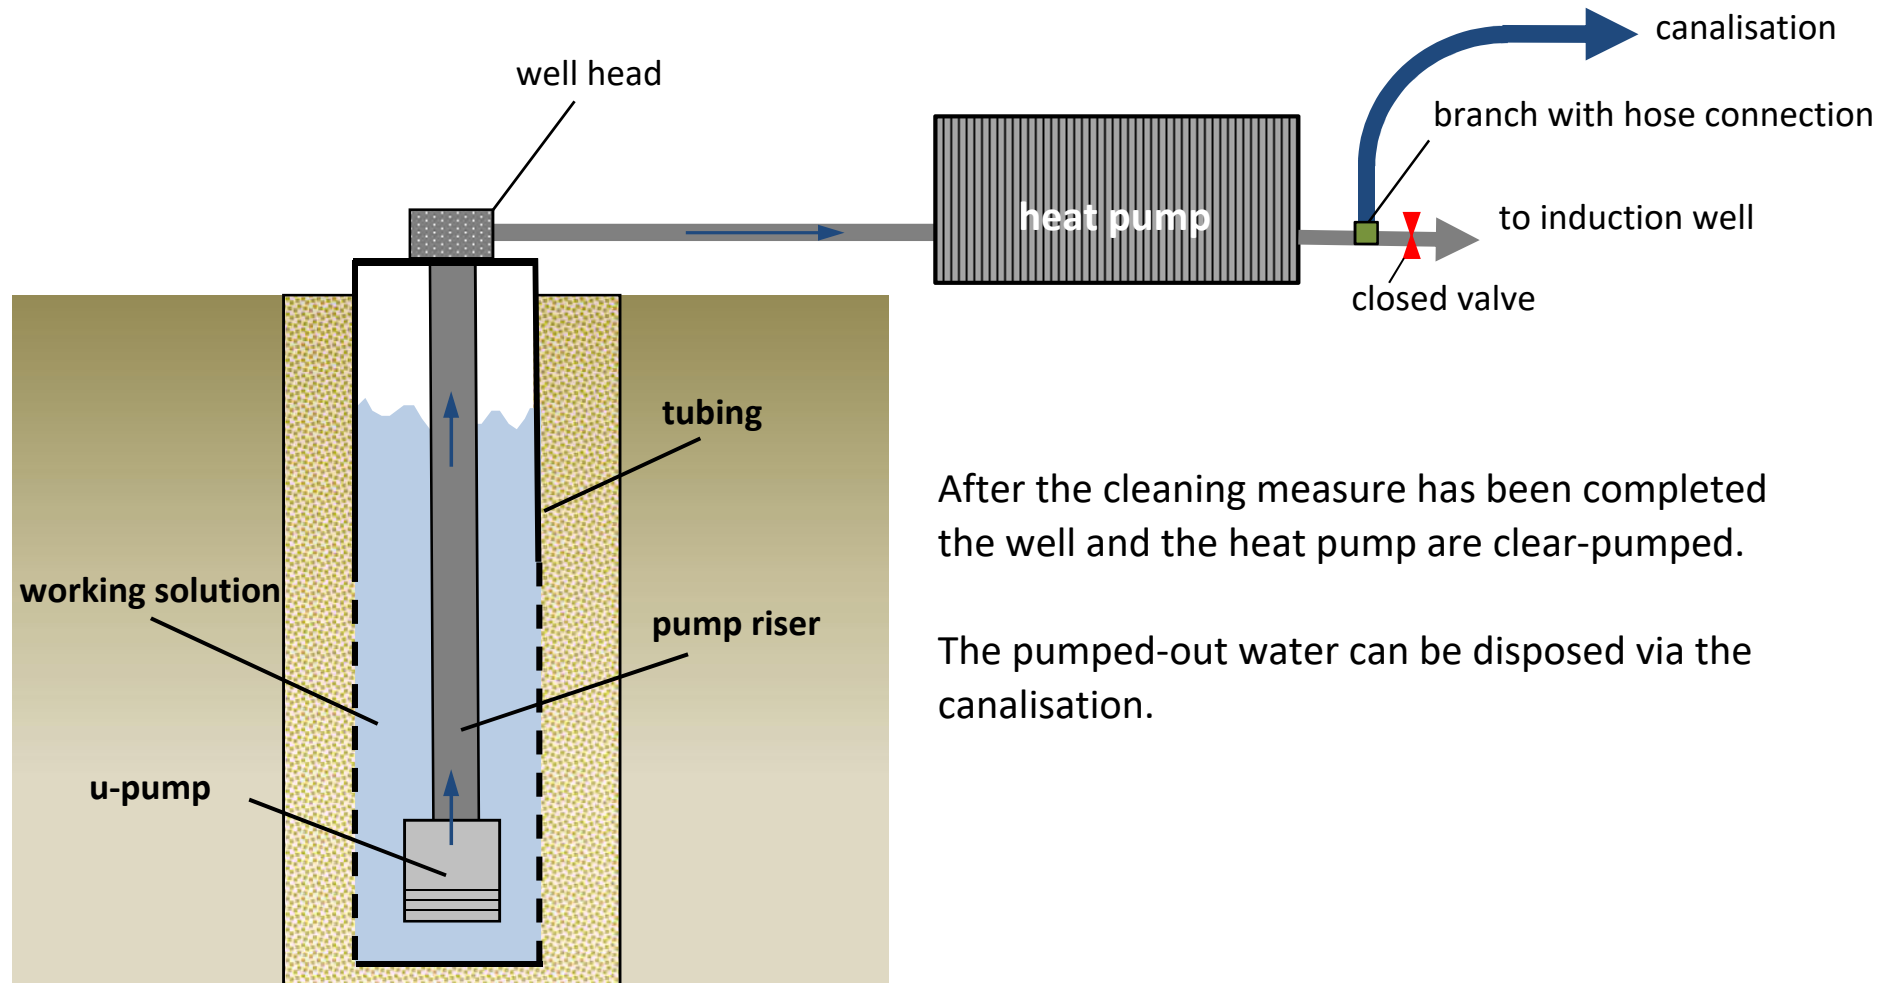

After the cleaning measure has been completed the well and the heat pump are clear-pumped.

The pumped-out water can be disposed via the canalisation.